PA48-40-2TS Data Sheet 48 pin TSOP socket/40 pin DIP 0.6" plug

Supported Device/Footprints

The PA48-40-2TS adapter converts the pinout of Intel E28F200CV/400CV flash memories in 48 pin TSOP packages to a 40 pin DIP footprint for use on several programmers.

| Socket | | | Footprint | | |
|--------|--------------------|--------|-------------------|-------|--|
| Manufa | cturer Device Pa | ackage | Device | Plug | |
| Intel | E28F200CR/ V | TSOP | E28F200C R/ V | 40DIP | |
| " | E28F400C R/ V | " | E28F400C R/ V | " | |
| " | E28F800C R/ V | " | E28F800C R/ V | " | |
| AMD | Am29F100 T/B | " | Am29F100 T/B | " | |
| " | Am29F(LV)200 (T/B) | " | Am29F(LV)200 (T/B |) " | |
| " | Am29F(LV)400 (T/B) | " | Am29F(LV)400 (T/B |) " | |
| " | Am29F(LV)800 (T/B) | " | Am29F(LV)800 (T/B |) " | |


The adapter is an alternative for the following part numbers:

| ET: | AS-48-40-02TS-6WEL-S | |
|------|-----------------------|--|
| CIC: | CIC-48TS-40D-B6-WEL-S | |

The adapter is intended for use with the following programmers:


| Aval Data: PKW-5100 | |
|---|---|
| B & C Microsystems: Proteus (UP40, GEP8/16) | [|
| Bytek: EZ-FT | |
| Elan: 6000, 4000/5000 Turbo, & 3000, 4000, 5000 | |

The adapter accepts packages with the dimensions listed below:

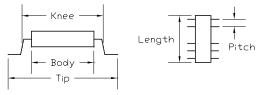

| Body | Knee | Knee Tip | | Length |
|-------------|---------|----------|---------|-------------|
| 18.4 mm typ | 18.8 mm | 20.0 mm | 0.50 mm | 12.0 mm typ |

Adapter Dimensions

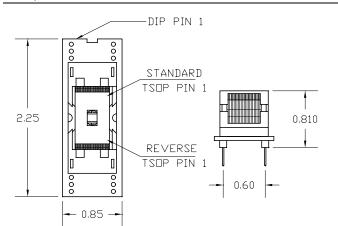

LOGICAL Logical Systems Corporation PO Box 6184, Syracuse, NY 13217-6184 USA Tel (315) 478-0722, FAX (315) 479-6753 S Y S T E M S www.logicalsys.com, Email: info@logicalsys.com

Adapter Construction

The adapter is made up of 2 sub-assemblies. They assemble via connectors making the adapter modular. This way the sub-assemblies can be replaced when they wear out.

When disassembling the adapter take care not to bend the pins. When reassembling the adapter note the pin 1 indicators to align the parts correctly.

Test Socket & Adapter Shim

| TSOP Auto-eject Test Socket: | |
|-------------------------------|-----------------------|
| Wells Part #: 648-0482211-A01 | LSC Part #: 48TSJ-W20 |
| Removable Adapter Shim: | |
| Wells Part #: 648-48-01 | LSC Part #: 48TS20-S |
| | |

48TS40-2

Accepts the socket and remaps the pins to the DIP plug.

Adapter Wiring

The following chart shows the connections from the TSOP device to the adapter's DIP plug.

| TSOP | SIGNAL | DIP | DIP | SIGNAL | TSOP |
|------|--------|------|------|---------|------|
| 1 | A15 | 38 | 10 | A16 | 48 |
| 2 | A14 | 37 | 30* | -BYTE | 47 |
| 3 | A13 | 36 | 30* | VSS | 46 |
| 4 | A12 | 35 | 21 | DQ15/A1 | 45 |
| 5 | A11 | 34 | 12 | DQ7 | 44 |
| 6 | A10 | 33 | - | DQ14 | 43 |
| 7 | A9 | 32 | 13 | DQ6 | 42 |
| 8 | A8 | 31 | - | DQ13 | 41 |
| 9 | NC | - | 14 | DQ5 | 40 |
| 10 | NC | - | - | DQ12 | 39 |
| 11 | -WE | 39 | 15 | DQ4 | 38 |
| 12 | -RP | 5 | 40** | VCC | 37 |
| 13 | VPP | 1 | - | DQ11 | 36 |
| 14 | -WP | 40** | 16 | DQ3 | 35 |
| 15 | NC | - | - | DQ10 | 34 |
| 16 | NC/A18 | 8 | 17 | DQ2 | 33 |
| 17 | NC/A17 | 9 | - | DQ9 | 32 |
| 18 | A7 | 29 | 18 | DQ1 | 31 |
| 19 | A6 | 28 | - | DQ8 | 30 |
| 20 | A5 | 27 | 19 | DQ0 | 29 |
| 21 | A4 | 26 | 20 | -OE | 28 |
| 22 | A3 | 25 | 11* | VSS | 27 |
| 23 | A2 | 24 | 2 | -CE | 26 |
| 24 | A1 | 23 | 22 | A0 | 25 |

* GND Plane

** VCC Plane


PA48-40-2TS Data Sheet Doc: 48402TS.DOC Rev 11/29/99 Page 1 of 2

Which To Use:

Standard and reverse pinout devices are supported by this adapter. Standard pinout devices are inserted live bug and Reverse pinout devices are inserted dead bug.

The socket on this adapter accomodates both orientations using a removable shim. The following chart shows how to set up and use the adapter for each.

Note: Pin 1 of the TSOP is in the upper right corner of the adapter for standard pinouts, in the lower right corner for reverse pinouts (see the Adapter Dimensions section).

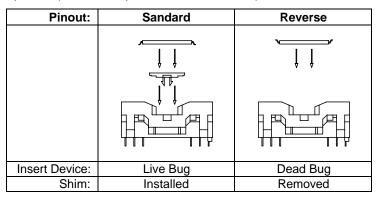

Package Codes:

Standard and Reverse packaging for these AMD products is denoted in the following manner:


Am40-1x00x-xxExx for Standard pinout Am40-1x00x-xxFxx for Reverse pinout


How To Insert the Shim:

Depress the rim of the socket to the open position. Insert shim with the clips downward, and push the clips through the hole in the socket. Push the shim as far down as it will go. When seated properly, the shim is entirely below the rim of the closed socket.

How To Remove the Shim:

Depress the rim of the socket so that it is open, and the notch in the side of the shim is visible (see picture below). Insert a smallbladed screwdriver (or other small tool) into the notch, and pry the shim out. This should be possible with a minimum of force.

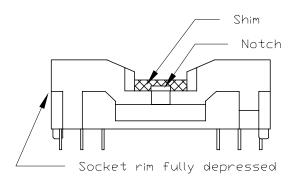

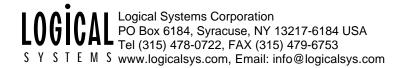

PA48-40-2TS Data Sheet Doc: 48402TS.DOC Rev 11/29/99 Page 2 of 2